# max. 100 m shielded cable 3 x 1.5 mm The with flow

# SWL

## Air flow monitoring

The SLF... sensor can be used in combination with an ASL... evaluation device to monitor the flow in the air (e.g. in air-conditioning systems).

The switching point is adjustable. While the fan starts up the switch-on bypass is active. The bypass duration (2 - 60 s) is adjustable.

#### Technical data of sensor

#### General

Fast-reacting air flow sensor with movable flange for installation in air ducts. With temperature compensation, suitable for media with rapid temperature changes.

Medium temperature -20...+100°C

#### Compensation behavior

(Reaction speed on change in medium temperature) fast, approx. 0.3 s

Installation depth 35 resp. 150 mm

Sensor tube diameter 10 mm

Sensor tube material nickel-plated brass

#### Measuring element

Insensitive to moisture (can be cleaned in water). Sensitive to mechanical deformation (care must be taken when cleaning with hard objects).

#### Protection class IP67

#### **Electrical connection**

Terminal strip accessible after removal of cover. 3-wire connection to evaluation unit

#### **Mounting conditions**

The sensor tip should be placed in the midst of the pipe and must be bathed completely from the medium. Please provide a straight pipe: 5x the pipe diameter before and after the sensor device

#### Technical data of evaluation unit

#### **Power supply**

230 VAC or 24 VAC/DC (see Product Summary)

Power consumption approx. 3 VA

#### **Contact load**

Relay, single pole 8 A, max. 250 VAC

#### Ambient temperature $0-60^{\circ}C$

#### Flow rate

Adjustable from 0.1 to 20 m/s for gaseous media

#### Response time 1...5 s

Temperatures > 80 °C, degree of contamination and flow velocity will reduce the response time.

#### Repetition accuracy

<2%, relative to the flow rate directly on the sensor.

Switching hysteresis approx. 2% of overall range

# Max. cable length between sensor and evaluation unit

100 m, for shielded cable 1.5 mm<sup>2</sup>.

#### Sensor protection

In case of breakage or interruption of the sensor wires, the unit switches off or an interruption of flow is signaled.

**Type of construction** Standard housing N 45 **Weight** approx. 0.35 kg

#### **I** Function

The air flow monitors work according to the calorimetric principle. A thermistor is heated up. As heat is withdrawn by the flowing air, the thermistor resistance alters. The change in resistance is evaluated. As the resistance also depends on the temperature of the medium, the difference must be determined by a second thermistor. The difference is compensated and in this way the switching point is kept stable. Suspended materials adhering to the sensor can have an insulating effect and so affect the measurement result and hence the defined switching point. Therefore it is advisable to remove any dirt during routine maintenance operations.


#### Switch-on bypass

While the plant is being started up (still no airflow present), the output contact is activated and the flow condition signaled. The time for the switch-on bypass is adjustable from 2-60 s. The start-up or switch-on bypass starts when the unit is switched on. If an external start button (normally closed contact) is connected (to the Z-Z terminals), the start-up bypass begins when the (locking) button is pressed.


#### **Product Summary**

Туре		Supply voltage
SLF3	Sensor, 35 mm	-
SLF15	Sensor, 150 mm	-
ASL453	Evaluation unit	230 V AC
ASL453/24	Evaluation unit	24 V AC/DC

## Operator interface

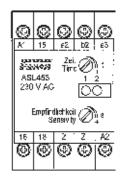

#### Wiring diagram

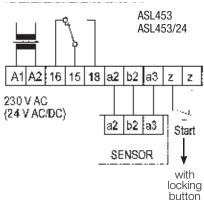

The terminal voltage of evaluation units ASW454 or ASW454/24 can also be checked with a voltmeter between the "a2" and "a3"

In case of malfunction,

by checking the resistances

Sensor SLF15 must be

between the connecting wires.

disconnected and checked with

the individual connecting wires:

Black-brown approx. 8.2 kOhm Black-grey approx. 8.2 kOhm Brown-grey approx. 18 kOhm

a suitable ohmmeter between

a sensor error can be ruled out

terminals after disconnecting the sensor. 31.4 VDC is the correct value.

#### Adjusting elements

s = sensitivity

time for switch-on bypass (high sensitivity at low flow)

#### Signal lamps

CE

1 = Flow present or switch-on bypass active

2 = supply voltage present

Dimensioned drawings SLF, see page 138

